

How to fit your Orion curtain pole


Measure the required position for your brackets.

It is advisable to fix the brackets 7.5cm above the window and 2.5cm minimum to the side.

Place the bracket into position and mark the holes.

Drill a hole and fix, using screws and plugs provided

The pole should then be positioned onto brackets. Make sure to put one ring on each end between the finial and the bracket.

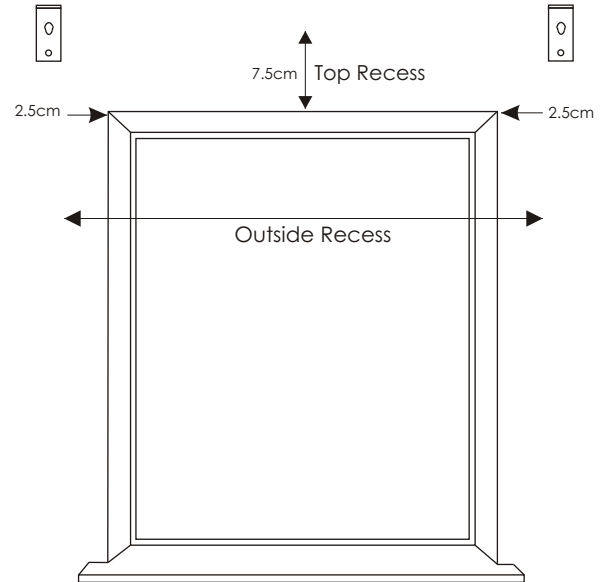

Components in box

- 1 x Curtain pole.
- Brackets : x 2 (240cm and above 3 brackets supplied)
- Finials: x 2
- Rings: x 3 per foot
- Screws: x 4 (240cm and above 6 brackets supplied)
- Rawplugs : x 4 (240cm and above 6 plugs supplied)

Tools Recommended

- Tapemeasure
- Pencil
- Screwdriver
- Spirit level

