

# Qube

## 20mm Square Metal Pole



### ASSEMBLY INSTRUCTIONS


Please read through these instructions prior to making any fixings or adjustments.

#### 1 Pole

Cut pole to desired length (using a hacksaw) and ensure that it is free from sharp edges inside and outside.

##### Longer Length Poles

If the overall pole length needs shortening, join the two poles with the connector and make sure the join is positioned in the centre before cutting equal amounts from each end.

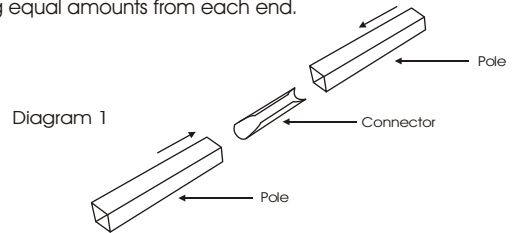

#### 2 Brackets


Establish the required height for the pole, then position brackets at least 8cm above the window edge. When positioning brackets allow for stack-back of curtains.

For poles over 180cm in length, a centre bracket is required which should be positioned in the centre.

To fix brackets unscrew part **A** from part **C** and separate part **B** from part **A**. Mark and drill holes 5mm in dia and insert wall plugs, screw part **A** into position with screws supplied (important, please ensure that the fixing holes on part **A** (see diagram 2) are vertical and the locking screw (i) are facing sideward.

Apply sticky tape to part A, then place part B over part A.

Now push part C into part A and tighten with allen key provided..

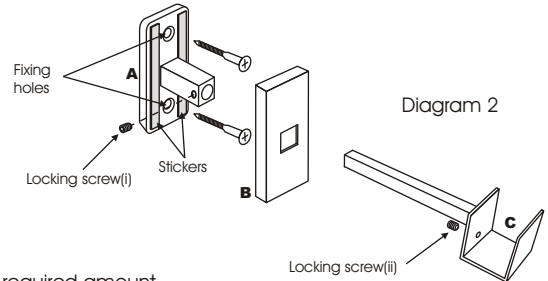

#### 4 Rings

Slide the required amount of rings onto the pole (a minimum of one ring per 10cm is recommended).

#### 5 Pole

Place the pole onto the brackets,

Adjust the pole so that equal amounts overhang at each end then tighten the locking screw (ii). Slide one ring on each end of the pole and push fit finials into position (see diagram 3).

#### 6 Finials

Finials and connectors are supplied with '□' rings for ease of assembly.

