


# Portiere Rod

## Fitting Instructions



### Tools you will need...

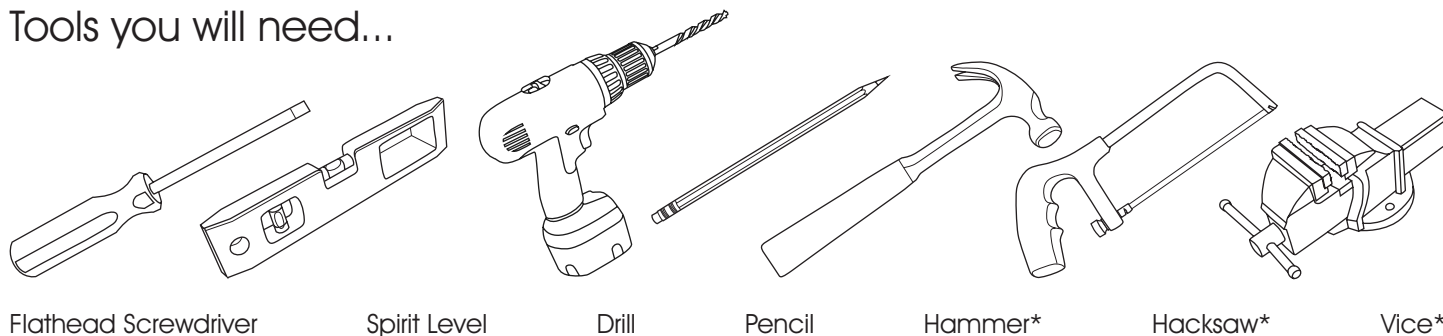

Flathead Screwdriver

Spirit Level

Drill

Pencil

Hammer\*

Hacksaw\*

Vice\*

\*These will only be needed if you intend to shorten the rod.

If your walls are not solid (i.e. brick or breeze block), you may need to purchase special fixings and should consult your local hardware shop. Please note all components are oiled to protect them during transit, wipe them dry with a soft cloth prior to assembly.

## how to..

### fit your portiere rod...

**Step 1:** As a guideline we recommend that the bracket is positioned on the side or return wall approx. 5cm from the edge you may use a spirit level for accuracy, Use a pencil to mark the exact position of the screw holes that will fix the bracket to the wall.

**Step 2:** Drill into the wall at the marked positions using an appropriate drill bit for the type of wall. Insert wall plugs, ensuring they are flush with the wall. Then screw the bracket with the angle bend in place into place using the screws provided.

**Step 3:** Check that the rod fits the door. If needed, Cut the rod to size by marking off the required length using a piece of masking tape, or scoring the surface lightly. Clamp the rod inside a vice, first wrapping it in a soft cloth for protection, and cut neatly using a hacksaw.

**Step 4:** Fit the required number of rings onto the rod, before positioning the rod on the bracket.

**Step 5:** Join the rod to the angle bend and tighten the grub screws with the allen key, the angle of the arm can be adjusted slightly using the grub screws.

### Care

Avoid excessive dampness, which could cause rust spots to develop.

Wax all components occasionally with a good quality beeswax or wax furniture polish as this will help protect your curtains from any powder residue which may have built up over time due to the nature of this product.